

Installation Instructions

INSTALLATION: Murals are installed like wallpaper, using vinyl on vinyl (VOV) wallpaper paste.

ONLY VINYL ON VINYL (VOV) WALLPAPER PASTE MAY BE USED. OTHERS WILL NOT HOLD THE WALLPAPER PROPERLY AND WILL CAUSE THE WALLPAPER TO FALL OFF THE WALL OVER TIME.


PREPARATION: For best results, wall should be smooth.

OPTIONS: Options for dealing with textured sheetrock walls:

Option 1: Murals can be installed over very light texture, however you will see the texture on the surface of the mural.

Option 2: Textured walls can be floated out with sheetrock "mud". This should be done by someone with experience in this procedure.

Option 3: Textured walls can be covered with 1/8" thick tempered hardboard (masonite-type) using construction adhesive and screws. Seams and screw holes should be filled with spackling paste and sanded. For best results, surface should be primed with white flat latex paint.

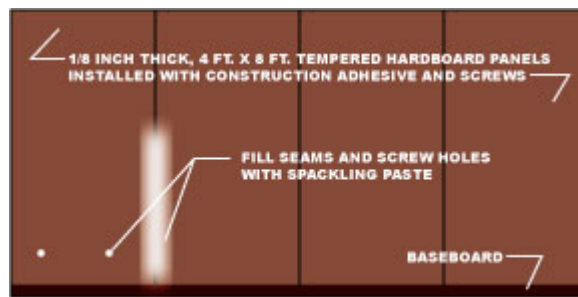

If the mural is furnished in sections, begin with the far left panel and work to the right.

Step 1 Using a low pile paint roller, apply a thin coat of VOV wallpaper paste to the wall. If the mural is furnished in sections, apply the paste only to the area that will be covered by the first panel.



Step 2 Set up a table nearby the place where you will be installing the mural. Lay the mural over the table. Apply a thin coat of VOV wallpaper paste to the back of the vinyl. For ease of handling, the vinyl panels may be loosely folded after the paste is applied to that area. Avoid hard creases.



Step 3 Apply the vinyl to the wall loosely, adjusting it for proper alignment. Using a damp sponge, begin lightly rubbing the mural, from the center outward, in order to remove any air bubbles. Continue until all of the air bubbles are removed. Using the damp sponge, remove any wallpaper paste that is on the surface of the mural.



Step 4 Carefully align the next panel. There is a one inch overlay of the mural that will allow you to match the edge of this panel to the panel previously installed. Follow the instructions in step 3 to install this panel. Continue this process until all panels have been installed. If the mural is a wall-to-wall installation, the last panel will be slightly oversized and require trimming. Trim any excess material at the top and bottom of the mural as well.

